
## Remote I/O R30 Series

# **INSTALLATION BASE**

Functions & Features

• Installation base dedicated to Remote I/O R30 Series, Paperless Recorder TR30 Series and Field Logger DL30 Series

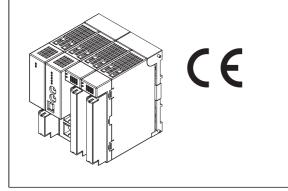

# MODEL: R30BS[1][2]

### ORDERING INFORMATION

Code number: R30BS[1][2]

Specify a code from below for each of [1] and [2].

(e.g. R30BS16/Q)

 Specify the specification for option code /Q (e.g. /C01)

# [1] NUMBER OF SLOTS

**00**: 0 slot

02: 2 slots

**04**: 4 slots

06: 6 slots

**08**: 8 slots

12: 12 slots

16: 16 slots

# [2] OPTIONS

blank: none

**/Q**: With options (specify the specification)

### **SPECIFICATIONS OF OPTION: O**

COATING (For the detail, refer to our web site.)

Only solder side of the main PWB is coated.

/C01: Silicone coating /C02: Polyurethane coating /C03: Rubber coating

# **GENERAL SPECIFICATIONS**

Capacity:

R30BS00: I/O module, 0 slot (Model: TR30, DL30 single use)

R30BS02: I/O module, 2 slots R30BS04: I/O module, 4 slots R30BS06: I/O module, 6 slots R30BS08: I/O module, 8 slots R30BS12: I/O module, 12 slots R30BS16: I/O module, 16 slots

# INSTALLATION

Operating temperature:  $-10 \text{ to } +55^{\circ}\text{C} \text{ (14 to } 131^{\circ}\text{F)}$ Storage temperature:  $-20 \text{ to } +65^{\circ}\text{C} \text{ (-4 to } +149^{\circ}\text{F)}$ Operating humidity: 10 to 90 %RH (non-condensing)

Atmosphere: No corrosive gas or heavy dust

Mounting: Surface or DIN rail

**Weight** (Without modules mounted) R30BS00: approx. 50 g (1.76 oz)

R30BS02: approx. 100 g (0.22 lb)

R30BS04: approx. 160 g (0.35 lb)

R30BS06: approx. 210 g (0.46 lb)

R30BS08: approx. 260 g (0.57 lb)

R30BS12: approx. 360 g (0.79 lb)

R30BS16: approx. 470 g (1.04 lb)

# **PERFORMANCE**

**Dielectric strength**: 1500 V AC @ 1 minute (Internal power or internal bus to FE; isolated on the power supply module)

# **STANDARDS & APPROVALS**

EU conformity:

**EMC Directive** 


EMI EN 61000-6-4

EMS EN 61000-6-2

**RoHS Directive** 


# **EXTERNAL VIEW**


Mount the power supply module and network module on the dedicated slots (PWR and COM), and do not mount on I/O slots. PWR slot is on the left end and COM slot is on the immediate right of PWR slot. The I/O slots are numbered in the ascending order starting from the one on the immediate right of the network module (slot 1, slot 2...). For model: TR30 or DL30, mount it on the PWR and COM slot.

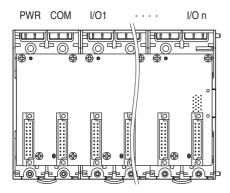


# **EXTERNAL DIMENSIONS unit: mm [inch]**

#### **■R30BS00**

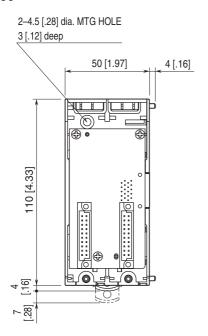


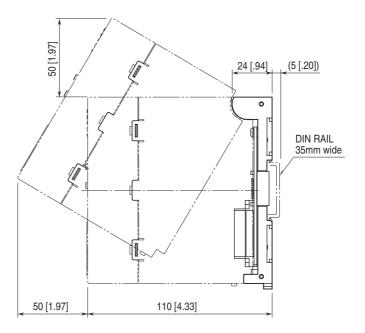

### **■**R30BS02

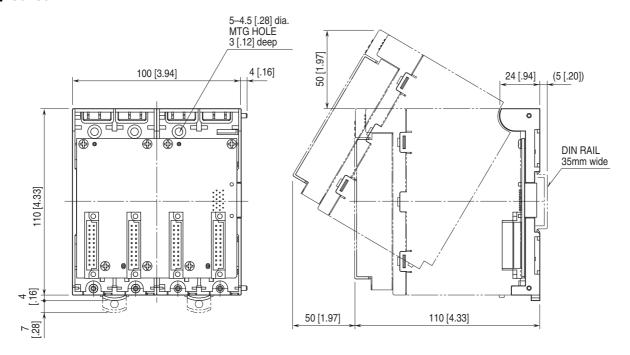

# ■R30BS04, BS06, BS08, BS12, BS16

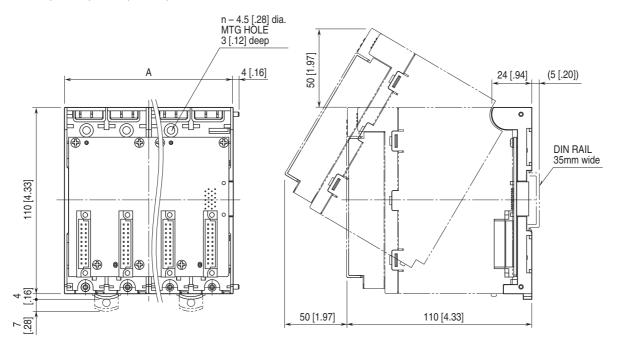


MODEL	A (SIZE)	n (NUMBER OF SCREWS)
R30BS04	150 [5.91]	8
R30BS06	200 [7.87]	11
R30BS08	250 [9.84]	14
R30BS12	350 [13.78]	20
R30BS16	450 [17.72]	26


# MOUNTING REQUIREMENTS unit: mm [inch]


UP

### ■ MOUNTING DIRECTION

Mount the unit vertically as is shown in the figure below. Mounting in other directions may cause heat build-up inside the unit and lead to shorten its life span or degrade its performance.

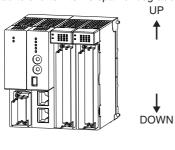

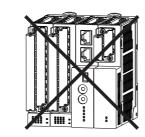

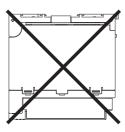








### ■ MOUNTING ON CONTROL PANEL


Secure sufficient ventilation space. Do not mount the unit right above devices which radiate great heat such as heaters, transformers or resistors. Maintenance space is also required above and below the unit.

Panel ceiling or wiring conduit (height  $\leq$  50 mm or 2 in.)

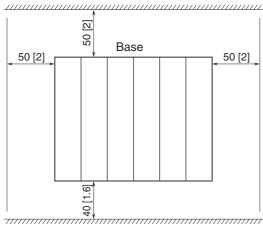


Panel bottom or wiring conduit (height ≤ 50 mm or 2 in.)


### ■ R30BS00

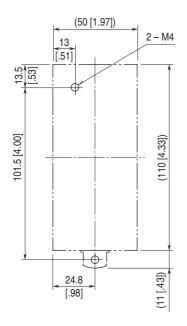

### ■ R30BS02

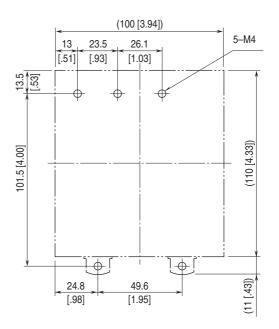

# ■ R30BS04, BS06, BS08, BS12, BS16

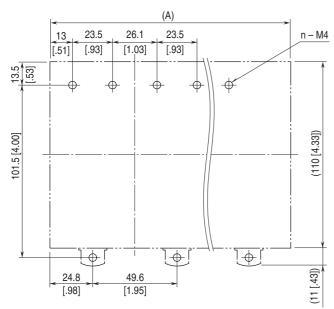

 $\Lambda$ 

Specifications are subject to change without notice.