INSTRUCTION MANUAL

DISCRETE INPUT MODULE

(Di 8 points (3-wire); with external excitation supply)

MODEL R3-DA8C

BEFORE USE

Thank you for choosing M-System. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

■ PACKAGE INCLUDES:

Discrete input module.....(1)

■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

■INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION

■ CONFORMITY WITH EU DIRECTIVES

- The equipment must be mounted inside the instrument panel of a metal enclosure.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure the CE conform-

■ HOT SWAPPABLE MODULES

• Replacing the module does not affect other modules on the same base. Thus, the module can be replaced while the power is ON. However, replacing multiple modules at once may greatly change live voltage levels. We highly recommend to replace them one by one.

■ GENERAL PRECAUTIONS

 DO NOT set the switches on the module while the power is supplied. The switches are used only for maintenance without the power.

■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -10 to +55°C $(14 \text{ to } 131^{\circ}\text{F})$ with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

■ WIRING

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

■ AND

• The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet


INSTALLATION

Use the Installation Base (model: R3-BSx).



COMPONENT IDENTIFICATION

■ FRONT VIEW

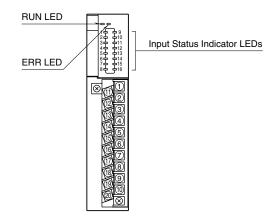

■ STATUS INDICATOR LED

RUN indicator: Bi-color (red/green) LED;

Red when the bus A operates normally; Green when the bus B operates normally; Amber when both buses operate normally.

ERR indicator: Bi-color (red/green) LED;


Red with excitation abnormality; Green in normal operating conditions.

Input status indicator:

• 1 to 8: Red LED; turns on with the input ON.

• 9 to 16: Unused.

■ SIDE VIEW

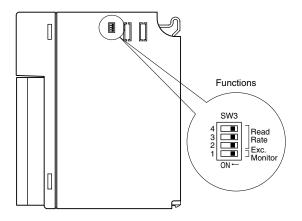

■ SIDE DIP SW

(*) Factory setting

• Excitation Monitor: SW3-1

SW	EXCITATION MONITOR				
	WITH (*)	WITHOUT			
SW3-1	OFF	ON			


• Read Rate: SW3-2, 3-3, 3-4

SW	READ RATE (≤ msec.)								
	10 (*)	1	5	20	50	70	100	200	
SW3-2	OFF	ON	OFF	ON	OFF	ON	OFF	ON	
SW3-3	OFF	OFF	ON	ON	OFF	OFF	ON	ON	
SW3-4	OFF	OFF	OFF	OFF	ON	ON	ON	ON	


TERMINAL CONNECTIONS

Connect the unit as in the diagram below.

■ EXTERNAL DIMENSIONS unit: mm (inch)

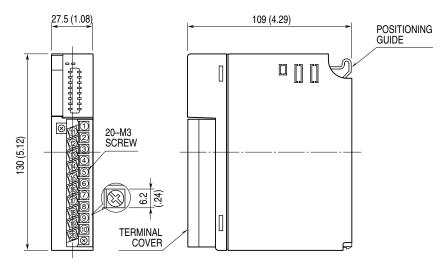

■ CONNECTION DIAGRAM

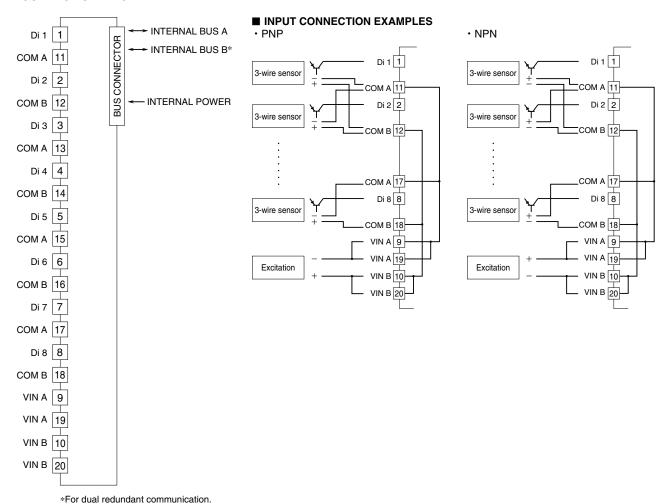

WIRING INSTRUCTIONS

■ SCREW TERMINAL


Torque: 0.5 N·m

■ SOLDERLESS TERMINAL

Refer to the drawing below for recommended ring tongue terminal size. Spade tongue type is also applicable. Solderless terminals with insulation sleeve do not fit.


Applicable wire size: 0.3 - 0.5 mm²

Recommended manufacturer: Japan Solderless Terminal MFG. Co., Ltd., Nichifu Co., Ltd.



DATA ASSIGNMENT

■ Di

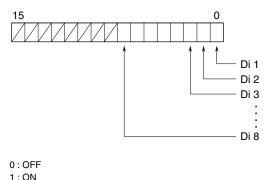

FUNCTIONS

■ Excitation Monitor ON

The input is held at the last status when the loss of excitation is detected. The excitation must be connected across the terminal 9 (19) and 10 (20).

■ Excitation Monitor OFF

All input signals are turned off when the loss of excitation is detected.

