

2-WIRE UNIVERSAL TEMPERATURE TRANSMITTER (HART communication, intrinsically safe)

MODEL

B3HU

BEFORE USE

Thank you for choosing us. Before use, please check contents of the package you received as outlined below.

If you have any problems or questions with the product, please contact our sales office or representatives.

■ PACKAGE INCLUDES:

Signal conditioner(1)
Shortcircuit bar(1)
Terminal block with CJC sensor(1)
I/O range and tag name label sheet(1)

■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

When using this product in potentially explosive atmosphere or hazardous (classified) location, you have to follow the safety procedure to install it. Please refer to "SAFE INSTALLATION MANUAL" for type of certification.

⚠ POINTS OF CAUTION

The following are general precautions when using this unit. The safety features and precautions specific to the hazardous locations are explained in "Safe Installation Manual" for each certification.

■ CONFORMITY WITH EU DIRECTIVES

- Functional insulation is maintained between the input and output.
- The equipment must be mounted inside a panel.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure the CE conformity.
- Install lightning surge protectors for those wires connected to remote locations.

■ GENERAL PRECAUTION

- Before you remove the unit or mount it, turn off the power supply and input signal for safety.

■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental (non-hazardous location) temperature must be within -40 to +85°C (-40 to +185°F) with relative humidity within 0 to 95% RH in order to ensure adequate life span and operation.
- Be sure that the ventilation slits are not covered with cables, etc.


■ WIRING

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

■ AND


- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

COMPONENT IDENTIFICATION

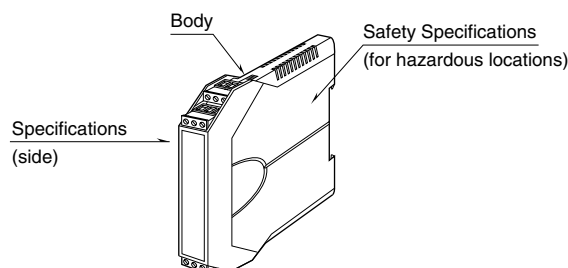


■ HOW TO SEPARATE THE EURO TYPE CONNECTOR TERMINAL BLOCKS

When you need to separate the euro type connector terminal blocks from the transmitter body for wiring, insert a minus driver between the euro type connector terminal block and the housing body, pull up the driver and pull out the euro type connector terminal block.

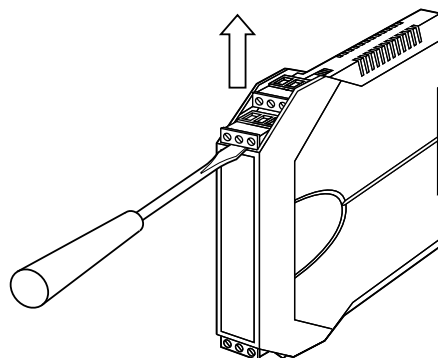

■ RTD/RESISTANCE SHORTCIRCUIT BAR


For a RTD/resistance input with 2- or 3-wire connection, short across the terminals 1 and 2 with the shortcircuit bar included in the product package. Remove it for other inputs/connection.

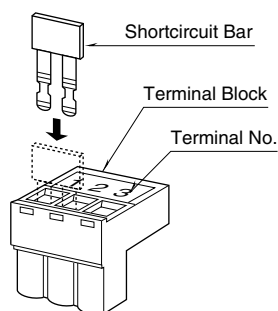

■ CJC SENSOR TERMINAL BLOCK

For a thermocouple input, replace the Terminal Block (4 – 5 – 6) with the one connected with the CJC Sensor included in the package. Be careful not to separate the Sensor from the terminal block. If you did, connect the CJC leg marked with a white dot to the terminal 5 and the other leg to the terminal 6.


The CJC Sensor is calibrated to a particular unit and not interchangeable with another. Match the Serial No. of the unit and the sensor.

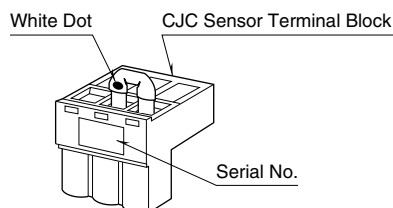

INSTALLATION

■ DIN RAIL MOUNTING


Set the unit so that its DIN rail adaptor is at the bottom. Position the upper hook at the rear side of the unit on the DIN rail and push in the lower. When removing the unit, push down the DIN rail adaptor utilizing a minus screwdriver and pull.

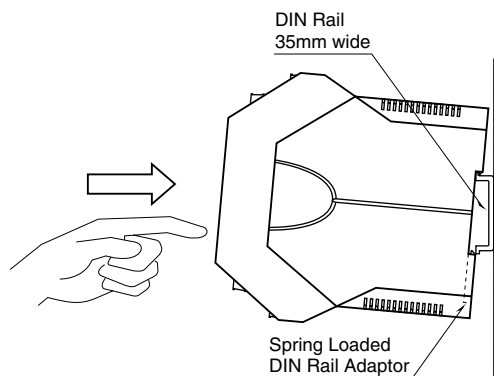

TERMINAL CONNECTIONS

Connect the unit as in the diagram below or refer to the connection diagram on the side of the unit. For use in a hazardous location, refer to “Installation Diagram” in the “Safe Installation Manual.”


■ EXTERNAL DIMENSIONS unit: mm (inch)

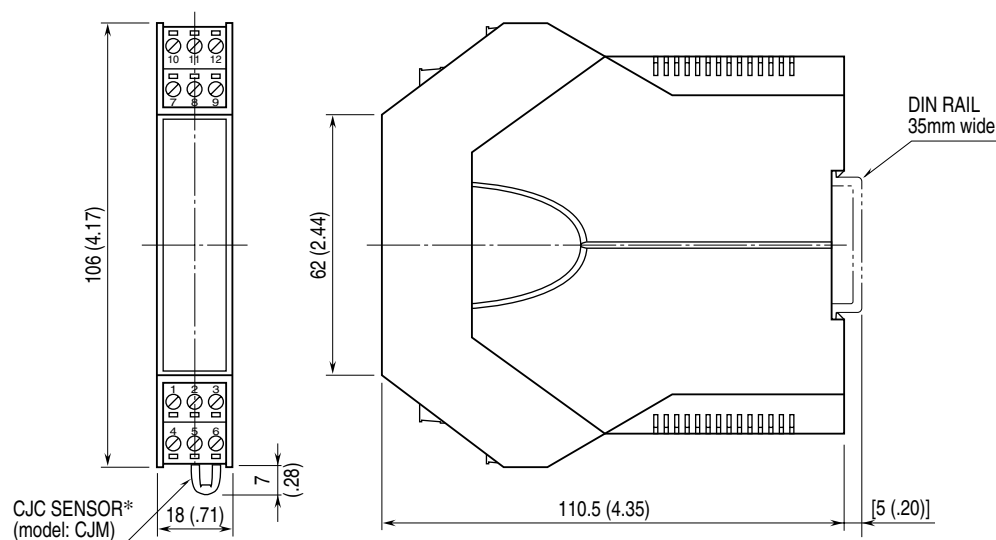

*Used only with a thermocouple input

• When mounting, no extra space is needed between units.

CONNECTION DIAGRAM

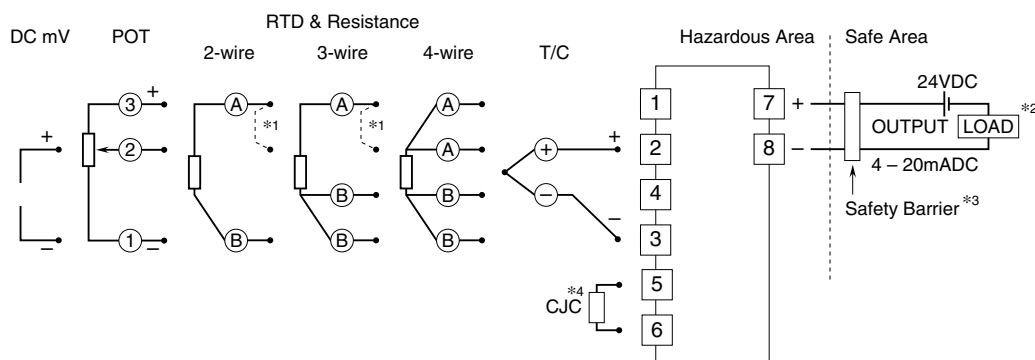

*1. Close across the terminals 1 & 2 for a resistance or RTD input.

*2. Limited to 250 – 1100Ω for HART communication.

*3. A safety barrier must be installed for the intrinsic safety.

The safety barrier must meet the Ex-data of this unit and must be approved for the hazardous location.

*4. Replace the Terminal Block (4 – 5 – 6) with the one connected with the CJC Sensor, included in the package.

WIRING INSTRUCTIONS

• Applicable wire size

Solid: 0.2 to 2.5 mm² (0.55 to 1.75 dia.)

Stranded: 0.2 to 2.5 mm² (Tinning wire ends may cause contact failure and therefore is not recommended.)

Ferruled: 0.2 to 1.5 mm² (0.55 to 1.35 dia.)

The following Phoenix Contact terminals are recommended:

AI 0,25-8YE 0.2 to 0.25 mm²

AI 0,34-8TQ 0.25 to 0.34 mm²

AI 0,5-8WH 0.34 to 0.5 mm²


AI 0,75-8GY 0.5 to 0.75 mm²

AI 1,0-8RD 0.75 to 1.0 mm²


AI 1,5-8BK 1.0 to 1.5 mm²

• Expose wire conductors by 8 mm (0.31").

Wire exposure

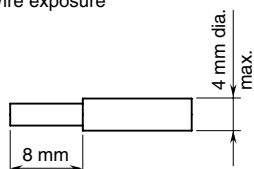

Recommended ferruled wire

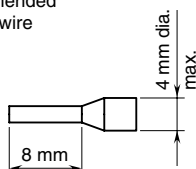

CHECKING

⚠ **Warning!** Whenever you need to measure voltage across the terminals or apply a simulated input signal to the terminals, make sure that there is no danger of explosion in the atmosphere.

1) Terminal wiring: Check that all cables are correctly connected according to the connection diagram.

2) Input: Check that the input voltage is within 0 – 100% of full-scale.

If except DC voltage input or its extension wires are broken, the output goes over 100% (below 0% with down-scale) due to the burnout function. Check leadwires in such a case.

3) Output: Check that the load is within the permissible limit including wiring resistance.

$$\text{Load Resistance } (\Omega) = \frac{\text{Supply Voltage (V)} - 12 \text{ (V)}}{0.024 \text{ (A)}}$$



(including leadwire resistance)

ADJUSTMENT PROCEDURE

INPUT RANGE LABEL

Blank I/O range labels are included in the product package. Write in the configured ranges and put the label on the side as shown below.

I/O Range Label (included in the product package)

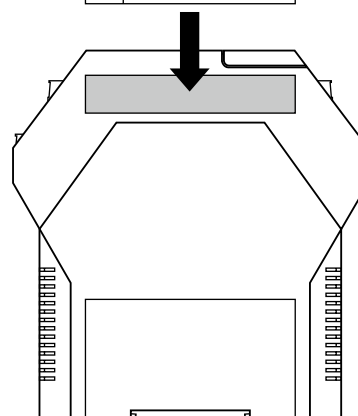

USING THE HART COMMUNICATION

Refer to the HART Setup Manual (EM-7502-B).

For operating an HHC (Hand-Held Communicator), refer to its instruction manual.

USING THE PC CONFIGURATOR

Detailed programming is available by using the PC Configurator Software (model: B3HUCFG) installed on a Windows PC via a HART modem connected to the PC. The PC Configurator Software and its Users Manual are downloadable at our web site.

LIGHTNING SURGE PROTECTION

We offer a series of lightning surge protector for protection against induced lightning surges. Please contact us to choose appropriate models.